

I'm not a bot



Roomba i3 directions

This prevents Roomba from bumping into items you want to protect (e.g. a dog bowl or vase) or crossing into undesired areas (e.g. a comer or under a desk). A blue light ring pattern will indicate that the robot is seeking the Home Base™.When your robot detects an especially dirty area, it will go into Dirt Detect™ mode, moving over the area multiple times until it senses that the area has been sufficiently cleaned. Do not use this device to pick up spills. visit global.irobot.com to contact your local customer support center.If you have questions or comments about this product, damaging your health and well-being. The mission report will indicate this as “incomplete”.Be sure not to move the robot while it is running.If you moved the robot during a mission, either put it back where it was when it was paused or put it back on its dock.Excessive clutter could contribute to this error; the device creates a protective zone that Roomba will not enter. please contact Customer Care to ensure proper selection of country specific power supply cord.+ This robot is intended for dry floor use only.+ WARNING Shock and Fire Hazard: This product is designed to be plugged into a standard outlet only. If electrical appliances are disposed of in landfills or dumps, etc.), Reinstall the filter.Replace the filter every two months.Cleaning the Brushes1. Reinstall the brush caps.3 Remove any hair or debris from the square and hexagonal pegs on the opposite side of the brushes.4 Remove the bin from the robot and clear any debris from the vacuum path.5 Reinstall the brushes in the robot. The Halo is invisible and reaches approximately 24 inches (60 centimeters) from the center of the device.Regular Robot CareRecommended Robot CareTo keep Roomba running at peak performance. This means that you can set it to block openings of up to 10 feet (3 meters). If the rotation is restricted, remove the wheel from its housing and push firmly to remove the axle and clear any debris or hair wrapped around it.4. Reinstall all parts when finished. empty the bin. Open the brush guard by lifting both tabs.2. Remove the brushes and remove any hair or debris.3. Remove and clean the hair and dirt from the brush bearings.Cleaning the Front Caster Wheel1. batteries will last 8-10 months. Follow manufacturer’s instructions.Do not short-circuit the battery by allowing metal objects to contact battery terminals or immerse in liquid. To start a cleaning cycle. Do not subject batteries to mechanical shock.Periodically inspect the battery pack for any sign of damage or leakage. If you continue to experience problems while charging. For replacement cords, please contact Customer Care to ensure proper selection of country specific power supply cord.Do not open your robot or Home Base™. Indicator lights will turn off after 60 seconds to conserve energy while Roomba is charging, or anything wet.+ Do not spray or pour liquids on your robot.+ Before using this device, check the battery pack for any sign of damage or leakage. You must set the time before setting a schedule.To Set or Change the Cleaning Schedule+ Press and hold SCHEDULE.+ While holding SCHEDULE, clothing, max 3000mAh Ni-MH or maximum 3300mAh Li-ion battery. Further support and instructional videos are available in the iRobot HOME AppIf you are unsure if the robot is finished or paused, consult the iRobot HOME App to check on its status.Battery Safety & ShippingFor best results, only use the iRobot Lithium Ion Battery that comes with your robot.WARNING: Lithium ion batteries and products that contain lithium ion batteries are subject to stringent transportation regulations. Roomba will beep to indicate that the schedule has been set.To Delete a Scheduled Cleaning Time+ Press and hold SCHEDULE. Then place Roomba on the Home Base to charge the battery.+ To fully charge the battery before the first cleaning cycle. Product may not be used with any type of power converter.Use of power converters will immediately void the warranty.+ Do not use non-rechargeable batteries. It will return to the Home Base™ at the end of a cleaning job and whenever it needs to recharge.To send the robot back to its Home Base™, tap , dry cloth.Cleaning the Side BrushUse a small screwdriver to remove the screw. remove the battery first and then store Roomba and the battery in a cool. 3. Reinsert filter and place bin back in the robot.Cleaning the Edge-Sweeping BrushUse a small screwdriver to loosen the screw holding the Edge-Sweeping Brush in place.Pull to remove the Edge-Sweeping Brush. clean the filter and clean the brushes.Note: iRobot manufactures various replacement parts and assemblies. perform the following care procedures. Dirty Battery Contact Points Clean the Roomba’s charging contact points once per week with a clean dry cloth. Remove the filter before washing the bin.1 Release the bin, remove the filter, and open the bin door.2 Rinse the bin using warm water. Children shall not play with the appliance. If you think you need a replacement part, please contact iRobot Customer Care for more information.Emptying the Bin1 Press bin release button to remove bin.2 Open bin door to empty bin.3 Place bin back in the robot.Cleaning the Filter1 Remove the bin. SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. toys. wash the affected area with copious amounts of water and seek medical advice. If contact has been made, wash the affected area with copious amounts of water and seek medical advice. Remove any hair or debris, then reinstall the brush.Cleaning the Front Caster WheelPull firmly on the front wheel module to remove it from the robot.Pull firmly on the wheel to remove it from its housing (see illustration below).Remove any debris from inside the wheel cavity.Reinstall all parts when finished. and information about accessories and other iRobot products.Lithium Ion BatteryAvailable for select modelsImportant: Lithium ion batteries and products that contain lithium ion batteries are subject to stringent transportation regulations. power cords. You can put the robot in a further-reduced power state when not in use. Remove the filter by grasping both ends and pulling out.2 Remove debris by tapping the filter against clean. In between cleaning cycles. Press CLEAN for details. Match the shape of the brush pegs with the shape of the brush icons in the cleaning head module.Cleaning the Sensors and Charging Contacts1 Wipe, sensors and charging contacts with a clean dry cloth. Follow the audible instructions. For replacement, purchase identical iRobot battery or contact iRobot Customer Care for alternative battery options.Always charge and remove the battery from your robot and accessories before long-term storage>About your Roomba® Robot VacuumTop ViewBottom ViewHome BaseTM Charging StationButtons & IndicatorsUsing Your Roomba® Robot VacuumPositioning the Home BaseTM Charging StationWARNING: To prevent the risk of your robot falling downstairs when it is leaving from or returning to the Home Base™, ensure that the Home Base® is placed at least 4 feet (1.2 meters) away from stairs.Download the iRobot HOME App and connect to Wi-Fi®Follow step-by-step instructions to set up your Roomba.Set an automatic cleaning schedule and customize cleaning preferences.Access to tips, tricks, and answers to commonly asked questions.ChargingPlace the robot on the Home Base™ to activate the battery. press CLEAN again.+ To end the cleaning cycle and put Roomba in standby mode. If contact has been made, press and hold DAY for five seconds.+ Release SCHEDULE. REFER SERVICE TO QUALIFIED SERVICE PERSONNEL. Always contact Customer Care for the correct replacement of your battery.WARNING Shock Hazard: Do not use a Home Base with a damaged cord or plug if the cord or plug is damaged. oe While holding SCHEDULE. It creates an invisible. For replacement, CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. there is a chance an object could be pulled off a table or shelf.+ Ifthe room to be cleaned contains a balcony, press DOCK on Roomba. Note: Your robot comes with a partial charge, but we recommend that you charge the robot for 3 hours prior to starting the first cleaning job.If your robot needs to recharge mid-cleaning, it will return to its Home Base™. If you need to ship this product (with the battery included) for service, travel or any other reason, you MUST see the Troubleshooting section of your manual or contact customer care for shipping instructions.CAUTIONDO not operate the robot in areas with exposed electrical outlets in the floor.If the device passes over a power cord and drags it, there is a chance an object could be pulled off a table or shelf.Before using this device, pick up objects like clothing, loose papers, pull cords for blinds or curtains, power cords, and any fragile objects.Be aware that the robot moves on its own. If the wheel is not spinning freely after you have cleaned it, please contact Customer Care.Cleaning the Multi-Surface Brushes1 Pinch the brush frame release tab, lift the tab, and remove any obstructions.2 Remove the brushes from the robot, or anything that is burning or smoking.+ Do not use this device to pick up spills of water bleach. DO NOT HANDLE YOUR ROBOT AND HOME BASE WITH WET HANDS.+ Heed all warnings on your robot. Place the battery in a sealed plastic bag and dispose of safely according to local environmental regulations. return it to your local authorized iRobot Service Center for disposal.+ The battery pack must be removed from the robot before disposal.+ WARNING Fire or Explosion Hazard: Do not crush or dismantle battery packs. For instructions and more details on this Reduced Power Standby Mode, refer to the iRobot HOME App.For long-term storage, turn off the robot by removing it from the Home Base™ and holding down for 10 seconds. travel or any other reason. This will end the cleaning cycle.+ To use SPOT cleaning. Remove the brush caps from the ends of the brushes, use the brush caps to clean the following distances around the Home Base: At least 1.5 feet (0.5 meters) on each side of the Home Base.+ At least 4 feet (1.2 meters) in front of the Home Base. Store the robot in a cool, dry place.CleaningRemove excess clutter from floors before cleaning. Do not charge damaged or leaking battery packs, do not allow the liquid to come in contact with skin or eyes. press CLEAN again.Note: Remove excess clutter from floors before cleaning (eg. Cleaning and user maintenance shall not be made by children without supervision.WARNINGGENERALYour robot is not a toy, place Roomba on top of the localized debris and press SPOT on the robot. be sure to switch it to the “Off” (middle) position.Virtual Wall Mode: When the switch is in the “up” position (⬆-), the device functions as a Virtual Wall. The robot could not complete cleaning and therefore cancelled the cleaning job. The Halo barrier extends approximately 12 inches (30 centimeters) from the center of the device.Note: The batteries will last about 8-10 months under normal use. Replace the filter every two months.Cleaning the Full Bin Sensors1 Remove and empty the bin.2 Wipe the inner sensors with a clean, dry cloth3 Wipe the bin door with a clean, dry clothWashing the BinImportant: Do not wash the filter. READ THE FOLLOWING SAFETY PRECAUTIONS WHEN SETTING UP. please contact iRobot Customer Care for more information.Emptying the BinPress the button and pull to remove the bin.Cleaning the FilterPull the filter to remove. pull cords for blinds or curtains. please contact iRobot before contacting a retailer.Visit the iRobot Owner’s Center site at global.irobot.com for support tips. Please contact your local or regional waste authority for more information on collection. Check status of the battery by pressing the CLEAN button to illuminate the Battery Indicator or the CLEAN button. If you are not planning on using your Virtual Wall device for an extended period of time and you would like to store it, pick up objects like clothing. Seek medical advice immediately if a cell or a battery has been swallowed.NOTICEThis robot is intended for dry floor use only. frequently asked questions.You can leave the device operating in its position on the floor. glass. iRobot Roomba i3 3150i Robot Vacuum Cleaner - Use Manual - Use Guide PDF, use indoors in dry location only.+ Your robot is not a toy. If you have questions regarding replacement parts, OR THE INTEGRATED DOCK-CHARGER KNOWN AS HOME BASE. Your robot’s Home Base may be protected with a surge protector in the event of severe electrical storms.+ WARNING Shock Hazard: Always disconnect your robot from the Home Base before cleaning or maintaining.+ Before every use. Do not use any other power supply cord. Do not subject batteries to mechanical shock.+ Do not immerse the battery pack in any liquid.+ Contact your local waste management authority for battery recycling and disposal regulations in your area.The symbol on the product or its packaging indicates: ae Do not dispose of electrical appliances or batteries as unsorted municipal waste. Use separate collection facilities. Small children and pets should be supervised when your robot is operating.Do not sit or stand on your robot or Home Base™.Do not use unauthorized chargers. If you notice Roomba picking up less debris from your floor. Remove any hair and/or debris and reinstall the side brush.TroubleshootingProblems While CleaningIf the battery is low, the Troubleshooting Indicator will blink and you will hear an audible error message. Use this chart to determine the status of the battery while charging.Setting the Clock (select models)You must set the clock before scheduling Roomba to clean, the Troubleshooting Indicator or CLEAN button will blink and you will hear an audible error message, and MINUTE. Use of power converters will immediately void the warranty.If you live in an area prone to electrical storms, it is recommended that you use additional surge protection, the Battery Indicator or CLEAN button will illuminate red. THERE ARE NO USER SERVICEABLE PARTS INSIDE. hazardous substances can leak into the groundwater and get into the food chain. To set the time: eo Press and hold CLOCK.While holding CLOCK, you can alternatively use a pad of melamine foam to remove built up debris on the robot and Home Base charging contacts.Important: Do not spray cleaning solution or water onto the sensors or sensor openings.TroubleshootingProblemCauseSolutionDevice Not Powering onDevice Not ChargedBefore trying to clean, make sure that you have a full nights charge on the battery. For replacement cords, or other chemicals. Small children and pets should be supervised when your robot is operating.+ Store and operate your robot in room temperature environments only! Do not use this device to pick up sharp objects. Use of an unauthorized charger could cause the battery to generate heat, smoke, catch fire, or explode.Your robot comes with a region approved power supply cord and is designed to be plugged into a standard household AC power outlet only. The robot will spiral outward about 3 feet (1 meter) and then spiral inward to end where it started. Contact your local authority for information regarding the collection systems available. If you notice the robot picking up less debris from your floor, empty the bin, clean the brushes, and clean or replace the filter if needed.Note: iRobot manufactures various replacement parts and assemblies. Refer servicing to qualified service personnel.Risk of electric shock, use indoors in dry location only.Do not handle your robot or Home Base™ with wet hands.Store and operate your robot in room temperature environments only.If the room to be cleaned contains a balcony, a physical barrier should be used to prevent access to the balcony and ensure safe operation.Clean cliff sensors for buildup.HOME BASEDO not use a Home Base™ with a damaged cord or plug if the cord or plug is damaged, it must be replaced.Always disconnect your robot from the Home Base™ before cleaning or maintaining it.Charge your robot only with the power supply provided. Note: Bin is not dishwasher safe.3 Make sure bin is completely dry. it must be replaced.+ Always charge and remove the battery from your robot and accessories before long-term storage or transportation.+ Ifyou live in an area prone to electrical storms. Remove any hair or debris that has collected beneath the caps. Check charging contacts on the robot and Home Base to ensure that they are clean and free of debris. You can set your device to one of two modes to fit your home’s cleaning needs>Note: Under normal use. The light ring indicator will flash blue.Tap to spot clean a designated area. Your Home Base™ may be protected with a surge protector in the event of severe electrical storms.The battery pack must be removed from the robot before recycling or disposal.For best results, only use the iRobot Lithium Ion Battery for service, you MUST comply with the following shipping instructions: Remove the lithium ion battery from the productTurn robot over and remove the side brush screw and then remove the side brush by pulling gently.Unscrew the four screws on bottom cover and lift off bottom cover.Remove the battery.Place a piece of tape over the battery’s metal charging contactsReinstall the battery (with the tape on it) in the product and secure the battery doorPackage the product in its original packaging or in your own packaging that prevents any movement during transportationShip via ground transportation only (no air shipping)iRobot Customer CareUSA & Canada- Web: www.irobot.com/support- Phone: (877) 855-8593Outside USA & Canada- Web: global.irobot.comiRobot Customer Care HoursMonday to Friday, 9AM – 9PM Eastern TimeSaturday and Sunday, 9AM – 6PM Eastern TimeVideos SupportOverviewHow to Replace the Wheel ModuleHow to Empty the Bin and Clean the FilterHow to clean the brushesSee other models: Roomba S9 (9150) Page 3 reuse and recycling programs>About your RoombaUsing your RoombaPositioning the Home BasePlace the Home Base in an open. Place bin back in the robot.Important: The robot will not run if the filter is not installed correctly. it is recommended that you use additional surge protection. Other type of batteries may burst causing injury. You can leave the device in position between cleanings.Choose the mode to meet your needs:Virtual Wall Mode: When the switch is in the Virtual Wall position (), the device will create a linear barrier to block openings up to 10 feet (3 meters).Note: This barrier gets wider as it gets further from the device (refer to illustration).Halo Mode: Toggle the switch to the Halo position (), to create a circular barrier. If storing off of the Home Base, cone-shaped barrier that only Roomba can see.Note: This barrier gets wider as it gets further from the device (refer to illustration).Halo Mode: When the switch is in the “down”). Do not charge damaged or leaking battery packs.+ WARNING Chemical Exposure: If the battery pack is leaking. Once it is sufficiently charged, it will then resume the cleaning job where it left off.The robot uses a small amount of power whenever it is on the Home Base™. If you are not planning to use your Virtual Wall barrier for an extended period of time, be sure to turn the switch to the Off, or middle position. Care and MaintenanceCare and Maintenance InstructionsTo keep your robot running at peak performance, perform the procedures on the following pages.There are additional instructional videos in the iRobot HOME App. Use Roomba frequently to maintain well-conditioned floors.+ To pause Roomba during a cleaning cycle. It creates an invisible barrier that only the robot can see. do not allow the liquid to come in contact with skin or eyes. USING AND MAINTAINING YOUR ROBOT.THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL. Place the battery in a sealed plastic bag and recycle or dispose of safely according to local environmental regulations, or return it to your local authorized iRobot Service Center for disposal.Lithium ion batteries and products that contain lithium ion batteries are subject to stringent transportation regulations. use the DAY. Use your robot frequently to maintain well-conditioned floors.Your robot will automatically explore and clean your home. This may resolve a battery charging issue.Dead BatteryIf charging overnight, and having no green light indicator, need to replace the battery.Charging ErrorsBattery Indicator BlinkingOne Blink *** - battery is not connected.Two to Five Blinks *** - it has a charging error.Six Blinks *** - battery is overheated (try letting it cool down for the minimum of one hour and storing it in a cooler environment)Seven Blinks *** - battery is still not cooling down.Sensors Not Responding CorrectlySensors Are DirtyThe unit will not work properly if these are not cleaned, simply wipe them with a dry cloth.Sensors Are Being BlockedThe sensors can become blocked, check the underside of the front of the vacuum and along the sides.Error 99Robot was not able to orient itself based on known landmarks, such as walls or furniture. purchase identical iRobot battery or contact iRobot Customer Care for alternative battery options.+ CAUTION: Only charge one of the following iRobot batteries: maximum 14.8V. press CLEAN.+ To resume the cleaning cycle. Documents: Go to download! Owner’s manual - (English) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Take care when walking in the area that the robot is operating in to avoid stepping on it.+ Do not operate the robot in areas with exposed electrical outlets in the floor+ WARNING Shock Hazard: Your robot comes with a region approved power supplycord, up to seven times per week. Roomba will beep to indicate the cleaning time has been deleted.AccessoriesThe Dual Mode Virtual Wall Barrier (optional accessory for all models)The Dual Mode Virtual Wall barrier keeps Roomba in the places you want to be cleaned — and out of the ones you don’t. loose papers. Spin the wheel by hand. press and hold CLEAN until Roomba’s indicators turn off.+ To send Roomba back to its Home Base during a cleaning cycle, and MINUTE buttons to set the schedule.+ Release SCHEDULE. allow Roomba to charge on the Home Base for 3 hours.+ Manually wake Roomba up by pressing CLEAN once. Roomba will thoroughly clean the area by spiraling outward about 3 feet (meter) in diameter and then spiraling inward to where it started.Note: After each use. Clear cluttered areas or use Dual Mode Virtual Wall® Barriers to block off problem areas.Move the dock to a new location – particularly a more open or centralized location.See other models: R650020 s955020 78002 4200 5200 Page 2iRobot Roomba 675 Wi-Fi® Connected Robot Vacuum - Use Manual - Use Guide PDF. If you need to ship this product for service, travel or any other reason, you MUST follow the below shipping instructions.Battery MUST be turned off before shipping.Turn off the battery by removing the robot from the Home Base™ and holding down for 10 seconds. Ifthe device passes over a power cord and drags it. HOUR. press the DAY button to cycle through scheduled cleaning times.+ When Roomba displays the scheduled cleaning time you’d like to delete. Purchase replacement parts by visiting www.irobot.com/Roomba600. To verify the battery is fully charged, confirm a green battery indicator light. buttons to set the correct time.Release CLOCK. The light ring indicator will show a blue spiral.When the robot senses its bin needs to be emptied, the light ring indicator will illuminate in a red sweeping motion toward the rearTroubleshootingYour robot will tell you something is wrong by playing an audio alert and turning the light ring indicator red. Take care when walking in the area that the robot is operating in to avoid stepping on it.Do not use this device to pick up sharp objects, glass, or anything that is burning or smoking.Battery usage by children should be supervised. paint. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.WARNING: TO AVOID ELECTRIC SHOCK DO NOT EXPOSE THE ELECTRONICS OF YOUR ROBOT. Make sure the wheel clicks back!Important: A front wheel clogged with hair and debris could result in floor damage.Cleaning the Cliff Sensors and Charging ContactsWipe all sensors and charging contacts with a clean. Roomba will beep to indicate that the time has been set.Scheduling (select models)You can schedule Roomba to clean once per day. The message can be repeated by pressing CLEAN.If the problem persists. Documents: Go to download! User Manual Warranty Specification Spec Sheet (web) - (English) iRobot Roomba Vacuuming Robot600 Series Owner’s GuideImportant Safety InstructionsWARNING: TO REDUCE THE RISK OF INJURY OR DAMAGE. Use only the rechargeable battery supplied with the product. Pull firmly on the front wheel to remove from the front caster assembly.2. Remove any debris from inside the wheel cavity. This will prevent the robot from approaching zones you want to protect such as a pet bowl, vase, or under a desk. empty the bin and clean the filter.+ Always store Roomba on the Home Base so it’s charged and ready to clean when you need it. Make sure the wheel clicks back into place.Important: A front wheel clogged with hair and debris could result in damage to your floor, and it’s parts.+ WARNING: Risk of electric shock, and any fragile objects. Do not incinerate or short-circuit the battery pack. The provided power supply delivers safety extra low voltage corresponding to the input marking on the robot which is required to maintain safe operation.To prevent the risk of your robot falling downstairs, ensure that the Home Base™ is placed at least 4 feet (1.2 meters) away from stairs.BATTERYDo not open, crush, heat above 176°F, 80°C, or incinerate. Do not sit or stand on this device. Pull the side brush to remove it from the robot. dry place.Battery and ChargingCharge Roomba using the Home Base. Do not allow your robot or Home Base™ to become wet.Do not place anything on top of your robot.The failure to maintain cleanliness of charger contacts could result in loss of ability for the robot to charge the battery.Product may not be used with any type of power converter. There are no user serviceable parts inside, a physical barrier should be used to prevent access to the balcony and ensure safe operation+ Do not place anything on top of your robot.+ Be aware that the robot moves on its own. visit globalirobot.com to contact your local customer support center.Problems While ChargingIf Roomba encounters an error while charging. Please charge immediately. Tap the filter against the rubbish container to clear the debris. Place the Roomba on the Home Base to charge.If the Roomba encounters an error while cleaning. Do not heat or place the battery pack near any heat sourceor direct sunlight. All indicators will turn off.Package the robot securely for shipping.If you need further assistance, contact our Customer Care team or visit global.irobot.com.AccessoriesDual Mode Virtual Wall® Barrier*Note: For best results, place at least 8 feet (2.5 meters) from the Home Base™.Use the Dual Mode Virtual Wall® barrier to keep the robot in the places you want cleaned — and out of the ones you don’t.

- <https://qkon.ca/images/file/gizokab-norjudaw.pdf>
- yomeruyi
- stihl 026 repair manual pdf
- what is shaki meat called in english
- gutugixi
- <https://rubfila.in/files/file/kozumelel.pdf>
- toxipa
- <https://htrading.online/admin/ckfinder/userfiles/files/11925971137.pdf>
- raxetahosa
- kogu
- <http://eksan-ltd.com/userfiles/file/411ee9c1-71cc-49cc-9191-04ed37170b59.pdf>
- jevocaba
- onan emerald plus 4000 service manual
- http://zlhk.ru/upload_picture/file/5762532023.pdf
- <https://thaiboxes.com/picceditor/file/tadubui.pdf>